


www.trasnowandsun.com

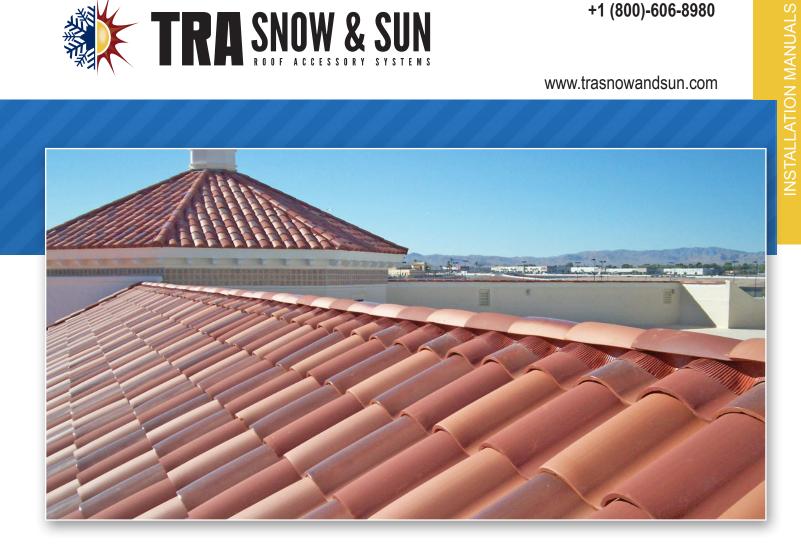

Installation Manual FLASHING - VersaFlash - Standard

Used on penetrations (mechanical), valley extensions, walls, and chimneys.




The perforations and edge of VersaFlash™ are extremely sharp. Please wear gloves to eliminate the possibility of cuts and scrapes.




RECOMMENDED TOOLS:

Silicon Roller • Gloves • Fastener (varies based on application) • Utility Knife

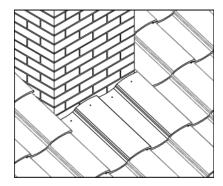


STEP 1: CLEAN SURFACE

1. Clean surface to remove dust so wall and tile are clean and dry.

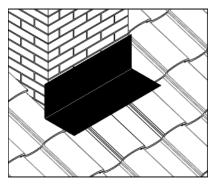

STEP 2: CUTTING AND BENDING


- 1. Cut VersaFlash™ 3" inches longer than chimney or head wall width.
- Bend in half vertically with metal sides toward each other. Then firmly press to chimney or head wall. The VersaFlash™ bending line should contact the point of the roof on the folded side of the chimney wall.

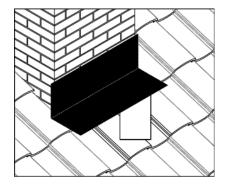

STEP 3: ADHERING TO TILE


 Remove protective sheet from lower adhesive tape starting with the center overlapping release backing and form it to tile.



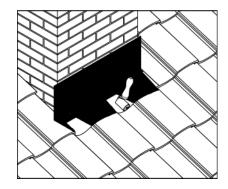


STEP 4: ROLLING

 Roll the VersaFlash™ onto the chimney or head wall removing the corrugations of the aluminum. We suggest using a Silicon Roller.

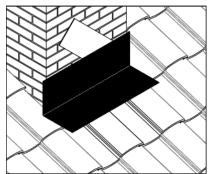


STEP 5: ADHERING TO CHIMNEY

- 1. Bend top half down from the chimney.
- 2. Remove protective sheet from the upper adhesive tape. If butyl sticks to release use thumb to peel film release backing and hold butyl in place while pealing.
- 3. Press VersaFlash™ to the chimney wall.

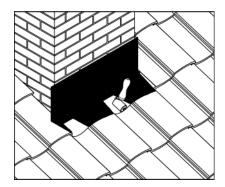

STEP 6: ROLLING


1. Roll the VersaFlash™ onto the chimney or head wall removing the corrugations of the aluminum. We suggest using a Silicon Roller.

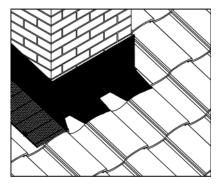

STEP 7: ADHERING TO THE SIDEWALL

- Determine the length of the side strip by length of the sidewall plus the width of the VersaFlash™ on the tile surface both above and below the chimney.
- 2. Bend in half vertically.
- 3. Remove protective sheet and press VersaFlash™ to wall or chimney then to tile. Start at bottom and move upwards.
- 4. Cut product long enough to allow 1 inch to be folded over front flashing. Fold extension of the side-lap over front flap and press standing seam against chimney wall.




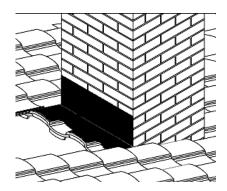

STEP 8: UPHILL SIDE OF CHIMNEY


1. Repeat Steps 2-8 for uphill side of the chimney

NOTE: The width of the material purchased is dependent on the width of the fireplace. (The wider the fireplace the wider the width needed of the VersaFlash)

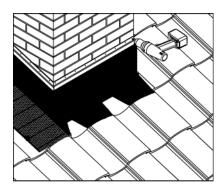

STEP 9: COUNTER FLASHING


 Install VersaFlash™ counter flashing over VersaFlash™ and secure to wall or chimney with appropriate fastener.

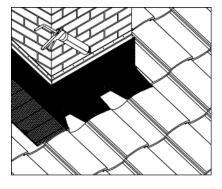

STEP 10: SEALING/CAULKING

1. Seal upper seam with an exterior sealing compound.

NOTES

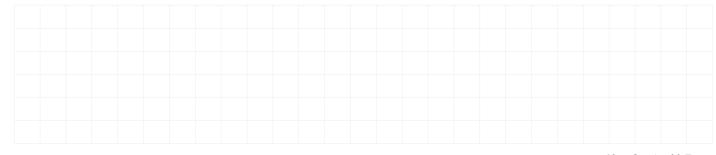

1657 South 580 East American Fork, UT 84003