



FLASHFREE FENCE 1 - 8"x18"

DESCRIPTION

- Overall dimensions: 18" L X 8" W X 3.99" H
- Designed for small pipes (see pipe product data sheet)
- Designed for asphalt shingles, simulated slate, slate, simulated shake, & wood shake
- Ice Flags (recommended)

MATERIALS - BRACKET

- Steel: 3/16" (ASTM A36) w/ Galvanized Steel **Baseplate**

MATERIALS - BASEPLATE

- Galvanized Steel: 10 ga. (ASTM A1011 & A880) w/ Steel **Bracket**

COLORS/FINISHES

- Zinc Plated Steel
- Powder coating available in many colors visit <http://trasnowandsun.com/color-chart/> to see color chart


NOTE: Due to specific job conditions, TRA Snow and Sun will only warranty a snow retention system/layout that has been designed by TRA Snow and Sun.




1 PIPE SNOW FENCE SYSTEM

FOR NEW CONSTRUCTION

USED ON: ASPHALT SHINGLES, SIMULATED SLATE, SLATE, SIMULATED SHAKE, & WOOD SHAKE

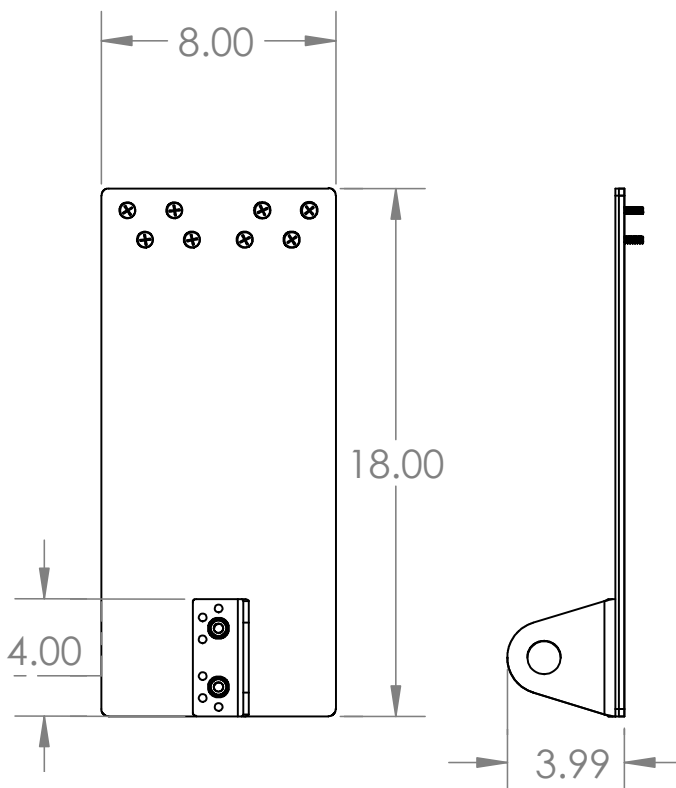

DIMENSIONS
DO NOT SCALE

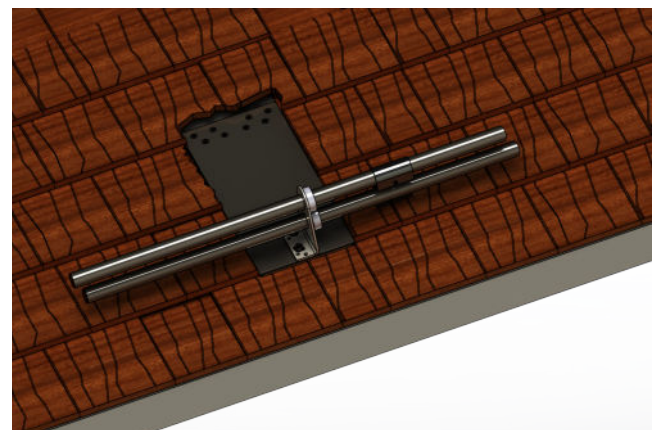

INSTALLATION INSTRUCTIONS:

Baseplate Installation:

- 1- Place baseplate on top of roof material and align with the downslope edge of the baseplate with the downslope edge of the roof material.
- 2- Install the baseplate by fastening to the roof deck with eight #14 screws.
- 3- Continue installing roof material around and over the baseplate.

Bracket Installation:

- 1- Install deck mount bracket over the two threaded bolts on the baseplate to 15ft-lbs of torque.
- 2- Install two lock nuts on the threaded deck mount bolts.
- 3- Install Tubes, Unions, Ice Flags, End Caps, and End Collars (refer to Tube-Style Installation Instructions).

We recommend sealing all roofing penetrations.

SNOW RETENTION SYSTEMS