



TRA SNOW & SUN
ROOF ACCESSORY SYSTEMS

Questions? Call Us!
+1 (800)-606-8980

www.trasnowandsun.com



Installation Manual **FLASHING - TileSeal™**


Hip and Ridge Seal
Used on: ?

! The perforations and edge of TileSeal™ are extremely sharp. Please wear gloves to eliminate the possibility of cuts and scrapes.




RECOMMENDED TOOLS:

- Silicon Roller
- Gloves
- Utility Knife
- Staple or nail gun

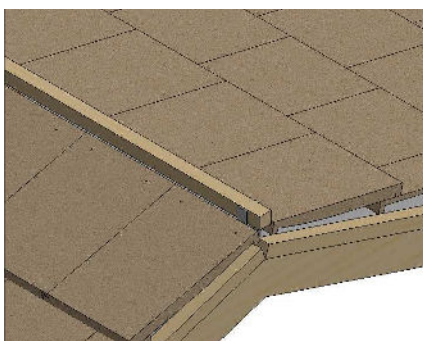

STEP 1: CLEAN SURFACE


1. Clean surface to remove dust so tile is clean and dry.

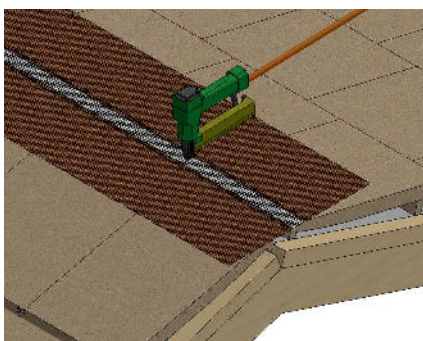

STEP 2: ?


1. Center TileSeal™ on top of nailing board.
2. Staple or nail the TileSeal™ every 12 inches down hip or ridge nailing board

NOTE: TileSeal™ should overlap 2 inches

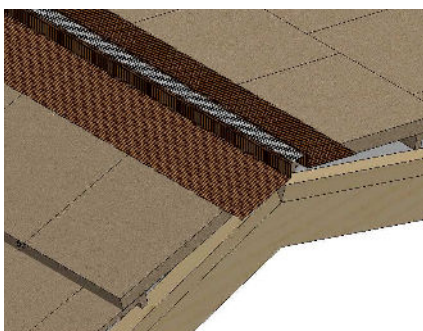


STEP 3: FORMING TO HIP OR RIDGE

1. Form the TileSeal™ to the tile roof surface.
2. Install the TileSeal™ from the top of the hip to the eave.

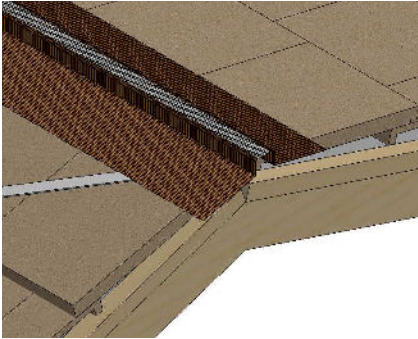


STEP 4: PROTECTIVE STRIP

1. Remove protective strip.

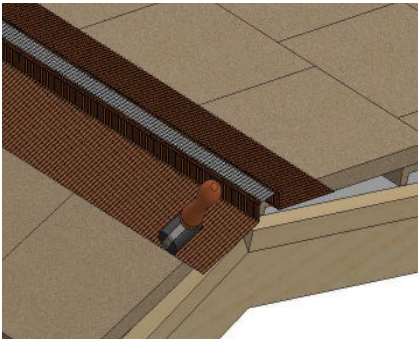

STEP 5: ROLLING

1. Press TileSeal™ in pans of each tile.
2. TileSeal™ can elongate 30% from barrel to pan. Take care that the end of the TileSeal™ is thoroughly pressed to the tile. The corrugation of the TileSeal™ should become flat as the material is pressed into the tile.
3. Then use a rubber roller for optimal adhesion.

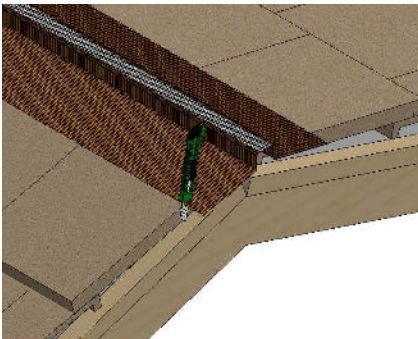

STEP 6: CUT OFF THE EXCESS

1. Cut off the excess amount of the TileSeal™ at the end of the hip or ridge with a knife or sheet metal shears.
2. The excess material can be used on the next project.



NOTES

Engineered Snow Retention
and Solar Mounting **Solutions**